


# CoCo Fiber Template



# Windsor Planter

Amount Needed: Cut a 12" piece of CoCo Fiber from the 24" roll at your local Austram dealer.

Recommended cutting tool: Barnel Model B1444 pruner or another good quality straight pruner.

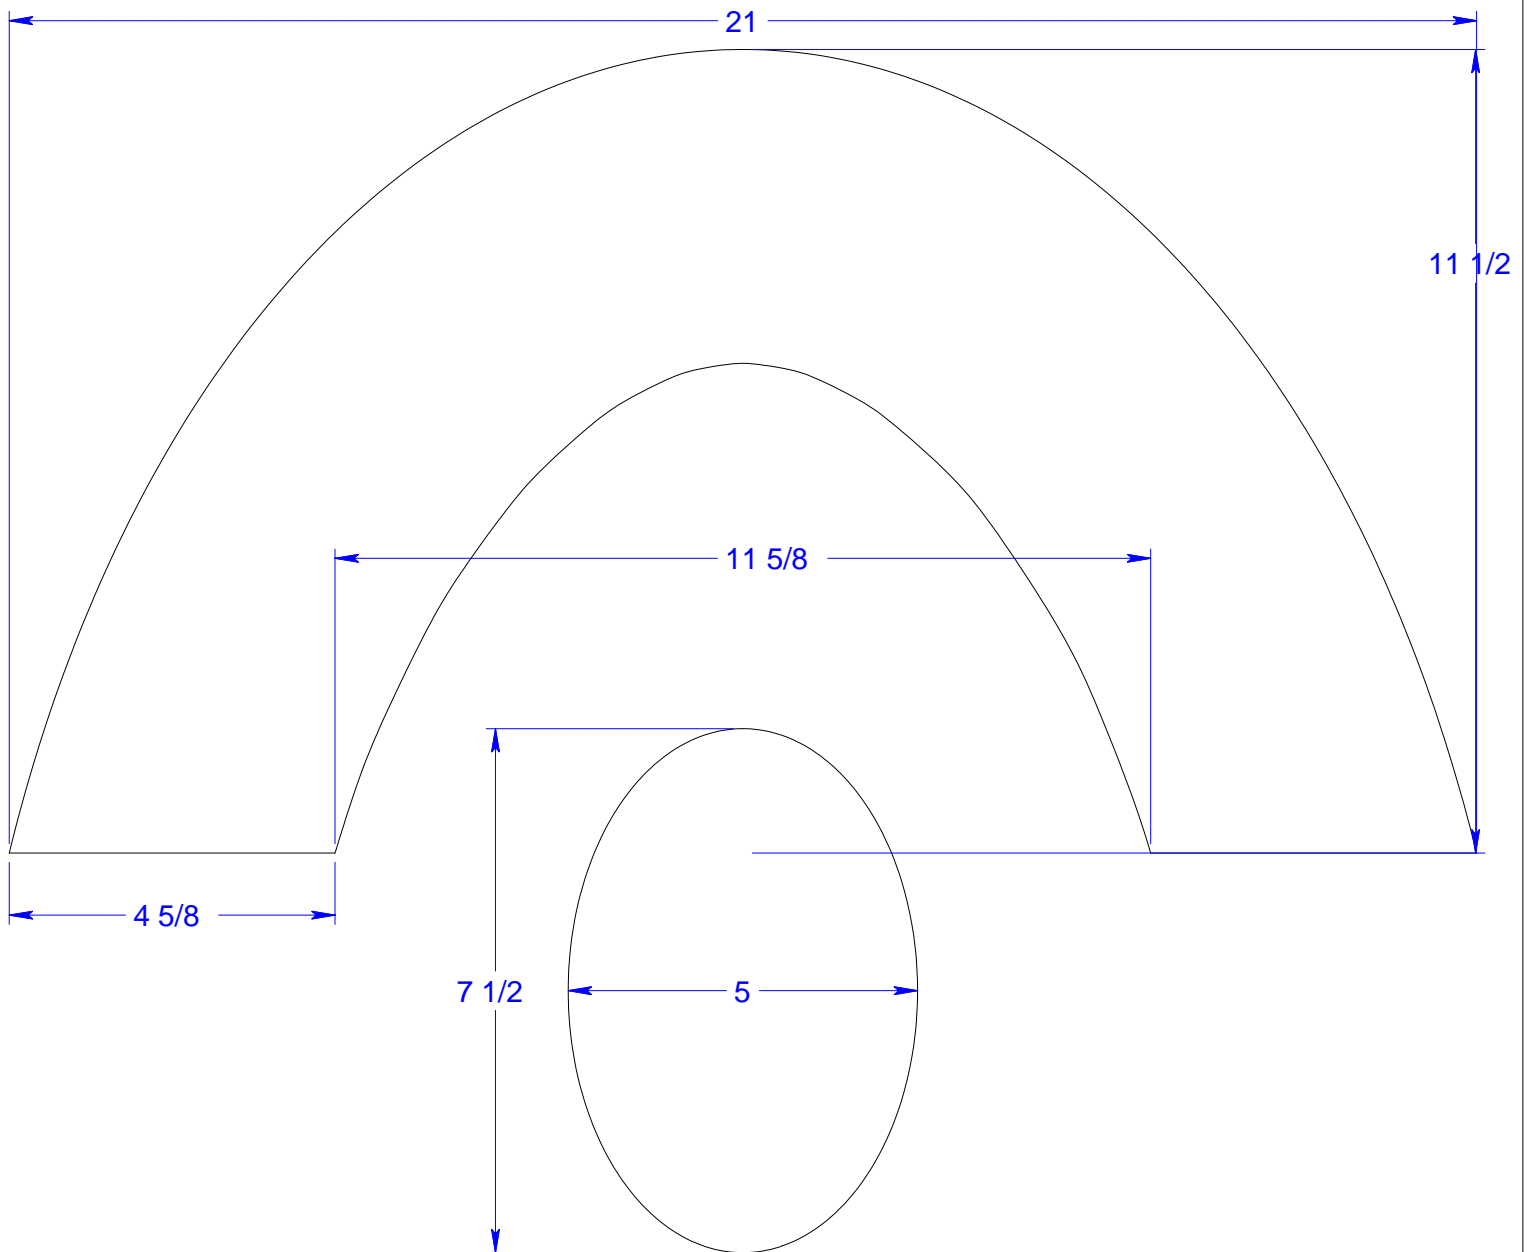



## CoCo Fiber Template



## Pettite Hexagon Planter

Amount Needed: Cut a 36" piece of CoCo Fiber from the 24" roll at your local Austram dealer.

Recommended cutting tool: Barnel Model B1444 pruner or another good quality straight pruner.

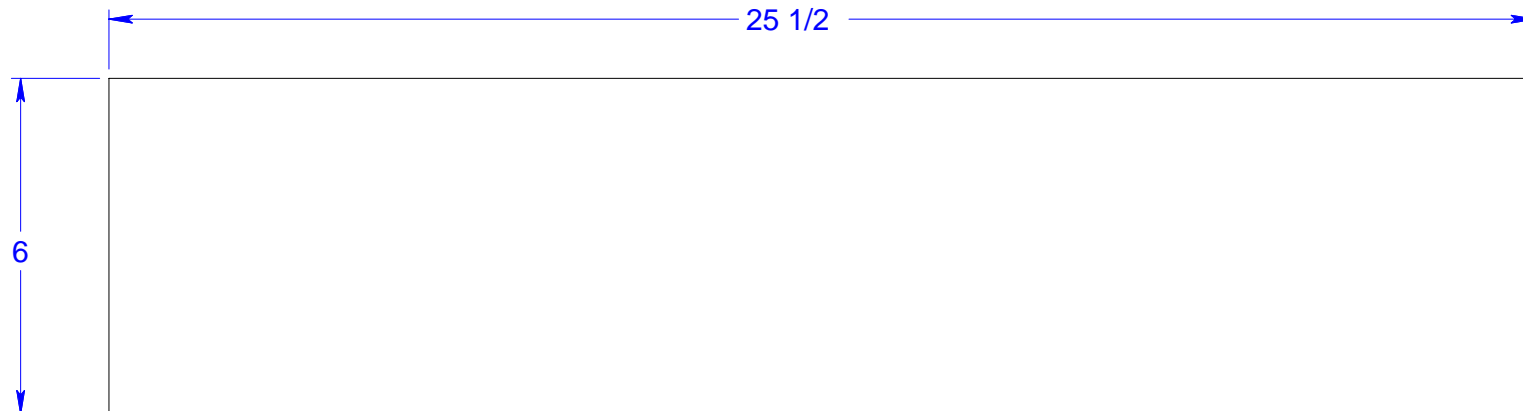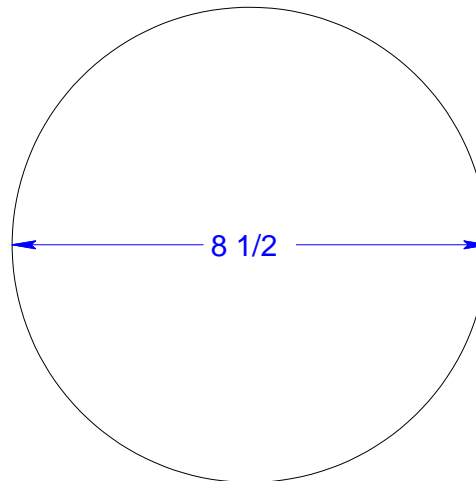


# CoCo Fiber Template



# Pettite Hexagon Planter

Amount Needed: Cut a 24" piece of CoCo Fiber from the 24" roll at your local Austram dealer.

Recommended cutting tool: Barnel Model B1444 pruner or another good quality straight pruner.

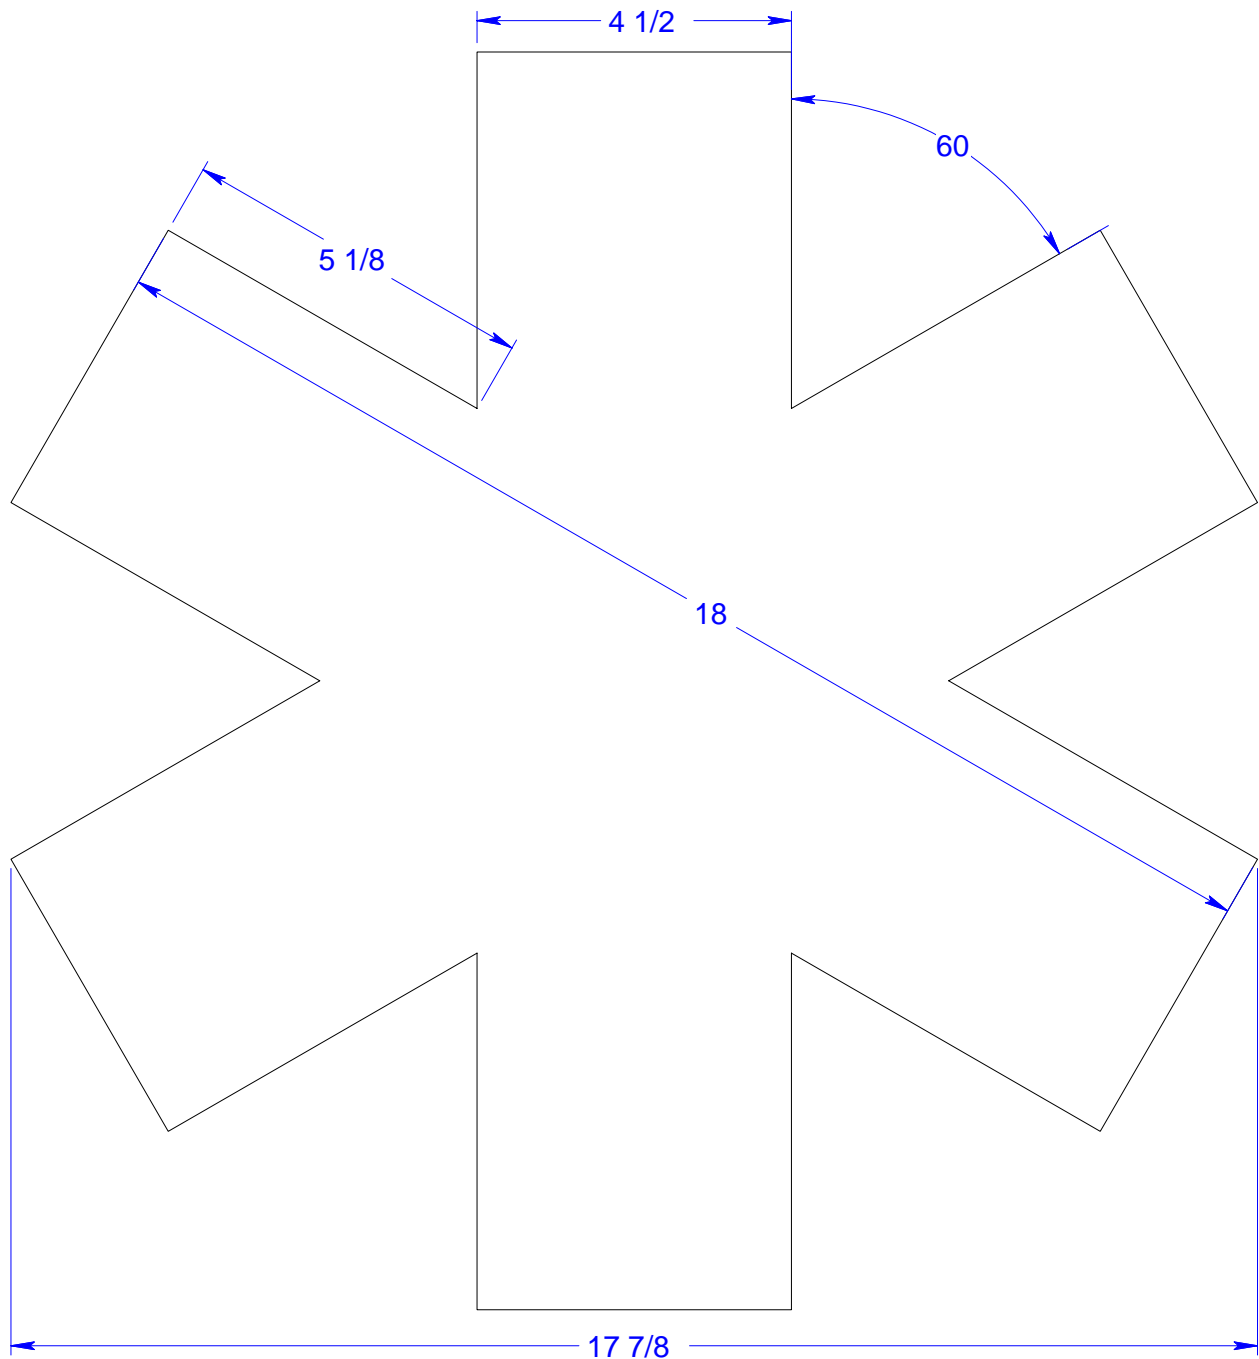


# CoCo Fiber Template



# Pettite Square Planter

Amount Needed: Cut a 24" piece of CoCo Fiber from the 24" roll at your local Austram dealer.

Recommended cutting tool: Barnel Model B1444 pruner or another good quality straight pruner.

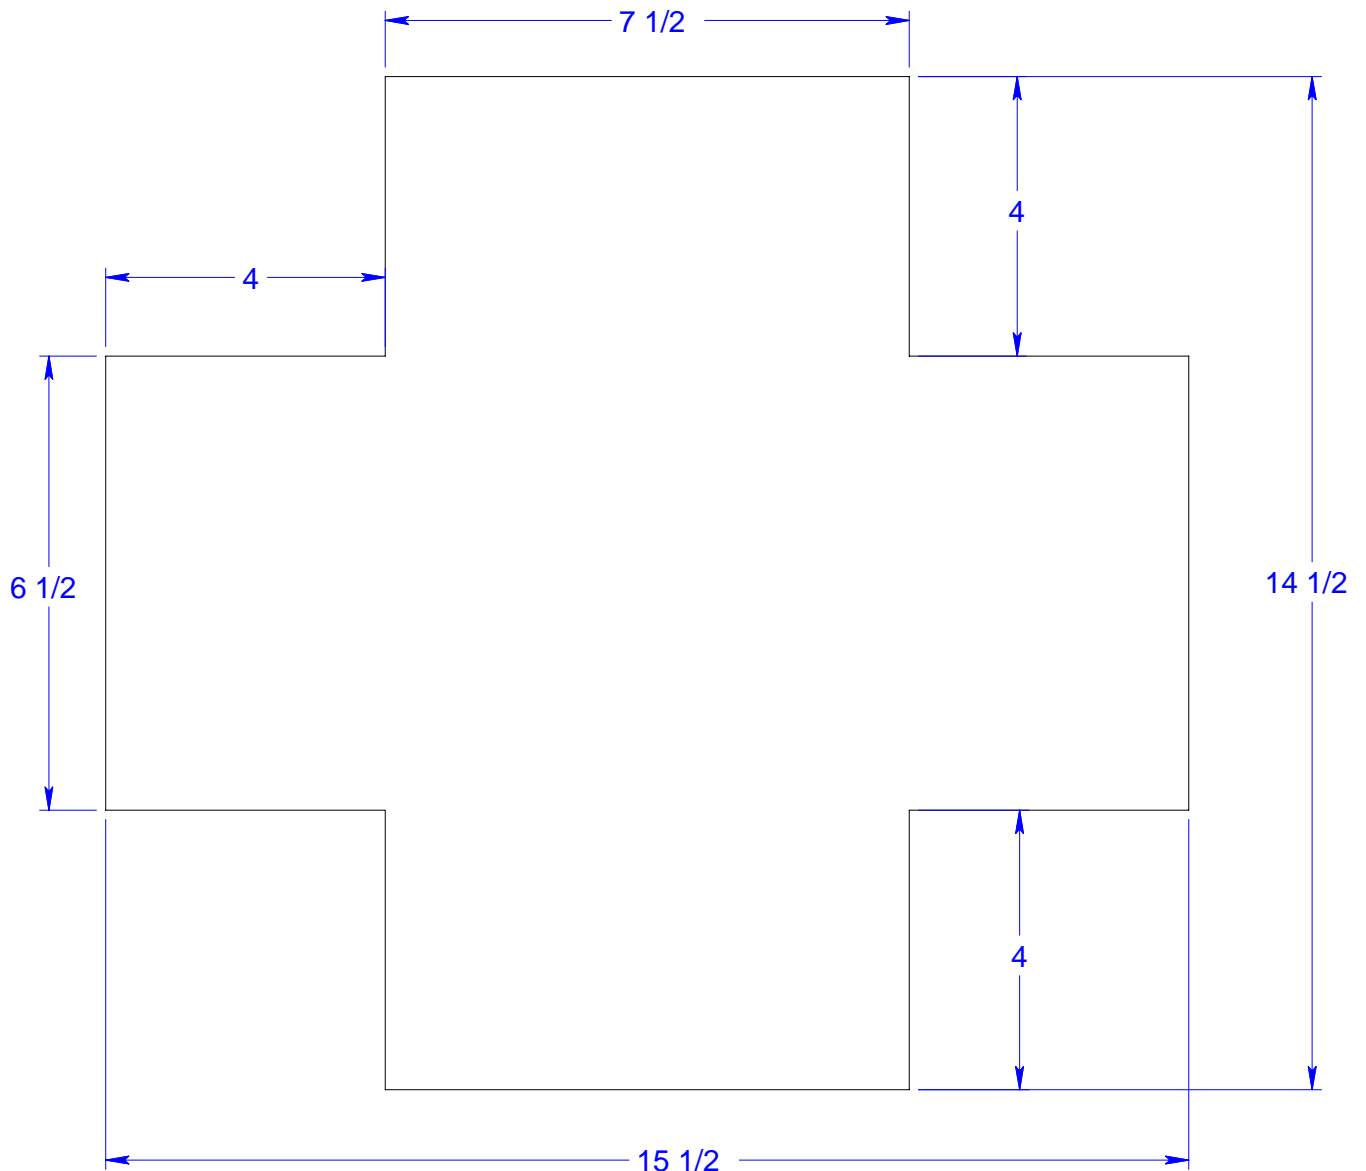

## CoCo Fiber Template



## Pettite Rectangle Planter

Amount Needed: Cut a 24" piece of CoCo Fiber from the 24" roll at your local Austram dealer.  
Recommended cutting tool: Barnel Model B1444 pruner or another good quality straight pruner.

